CRP PANEL thanos EVO Casambi

Casambi Room operating unit



Datasheet

Subject to technical alteration Issue date: 05.04.2023 • A130





» APPLICATION

Room control unit with Casambi radio interface for intuitive lighting control of Casambi ecosystem participants with up to three integrated sensors for recording room temperature, humidity and CO2. Scenes are started, colors selected or luminaires switched via a 4.8" touch screen. Easy configuration via the Casambi app allows device-specific settings or configuration of scenes and lighting functions with Casambi radio.

» TYPES AVAILABLE

Touch screen room operating unit temperature + opt. humidity, CO2

- CRP PANEL thanos EVO Temp Casambi*
- CRP PANEL thanos EVO CO2 Temp_rH Casambi*

* also available as design variant

» SECURITY ADVICE - CAUTION

The installation and assembly of electrical equipment should only be performed by authorized personnel.



The product should only be used for the intended application. Unauthorised modifications are prohibited! The product must not be used in relation with any equipment that in case of a failure may threaten, directly or indirectly, human health or life or result in danger to human beings, animals or assets. Ensure all power is disconnected before installing. Do not connect to live/operating equipment.

Please comply with

- Local laws, health & safety regulations, technical standards and regulations
- Condition of the device at the time of installation, to ensure safe installation
- This data sheet and installation manual

» PRODUCT TESTING AND CERTIFICATION



Declaration of conformity

The declaration of conformity of the products can be found on our website https://www.thermokon.de/

page 2 / 7 Issue date: 05.04.2023

» NOTES ON DISPOSAL



As a component of a large-scale fixed installation, Thermokon products are intended to be used permanently as part of a building or a structure at a pre-defined and dedicated location, hence the Waste Electrical and Electronic Act (WEEE) is not applicable. However, most of the products may contain valuable materials that should be recycled and not disposed of as domestic waste. Please note the relevant regulations for local disposal.

» MOUNTING ADVISE ROOM SENSORS

The Accuracy of the room sensors are influenced by the technical specifications as well as the positioning and the installation type.

During Assembly:

- Seal mounting box (if present).
- Installation type, air draught, heat source, radiation heat or direct sunlight can affect the measurement.
- Bulding material specific properties of the installation place (brick-, concrete-, partition wall, cavity wall, ...) can affect the measurement. (e.g.: Concrete accepts room temperature variation slower than cavity walls)

Assembly not recommendet in...

- Air draught (e.g.: close to windows / doors / fans ...)
- Near heating sources,
- Direct sunlight
- Niches / between furniture / ...

» BUILD-UP OF SELF-HEATING BY ELECTRICAL DISSIPATIVE POWER

Sensors with electronic components always have a dissipative power, which affects the temperature measurement of the ambient air. The dissipation in active temperature sensors shows a linear increase with rising operating voltage. This dissipative power has to be considered when measuring temperature. In case of a fixed operating voltage (±0,2 V) this is normally done by adding or reducing a constant offset value.

Thermokon transducers can be operated with variable operating voltages. The transducers are set at the factory with a reference operating voltage of 24 V =. At this voltage, the expected measuring error of the output signal will be the least. Other operating voltages, can cause a measurement deviation changing power loss of the sensor electronics.


A recalibration can be carried out directly on the unit or via a software variable (app or bus).

Remark: Occurring draught leads to a better carrying-off of dissipative power at the sensor. Thus temporally limited fluctuations might occur upon temperature measurement.

» APPLICATION NOTICE FOR HUMIDITY SENSORS

At regular environmental condition, it is recommended to calibrate the sensor annually to check the compliance with the accuracy required in the application. The following conditions can damage the sensor element or lead in long therm to loss of the specified accuracy:

- Mechanical stress
- · Contamination (e.g. dust / fingerprints)
- Aggressive chemicals
- · Ambient conditions (e.g. condensation on measuring element)



Re-calibration or exchange of the sensor element are not subject of the general warranty.

» INFORMATION ABOUT SELF-CALIBRATION FEATURE CO2

All gas sensors are subject to drift. The degree of drift is dependent on the use of components and product design. In addition, the following environmental conditions, among others, can accelerate/ favor the aging and wear of the sensors:

- Mechanical stress (also due to temperature fluctuation)
- Contamination (dust / fingerprints e.g.)
- Abrasive chemicals
- Environmental influences (high humidity / condensation on measuring element)

An internal self calibration function with dual channel technology compensates the caused drift. Thermokon sensors are for permanent use (e.g. hospitals).

» INFORMATION ABOUT INDOOR AIR QUALITY CO2

EN 13779 defines several classes for indoor air quality:

Category	CO ₂ content above the content in outdoor air in ppm		Description
	Typical range	Standard value	
IDA1	<400 ppm	350 ppm	Good indoor air quality
IDA2	400 600 ppm	500 ppm	Standard indoor air quality
IDA3	6001.000 ppm	800 ppm	Moderate indoor air quality
IDA4	>1.000 ppm	1.200 ppm	Poor indoor air quality

Issue date: 05.04.2023 page 3/7

» TECHNICAL DATA

Measuring values	temperature, optional humidity CO2
Network technology	Casambi (Evolution) 2,4 GHz
Power supply	24 V = (±10%) or 24 V ~ (±10%) SELV With alternating voltage, the correct polarity must be ensured.
Power consumption	typ. 2,5 W (24 V =) 5 VA (24 V ~) ²
Measuring range temp	0+50 °C
Accuracy temperature	±0,5K (typ. at 21 °C)
Casambi functions	light ON/OFF/DIM, colour temperature, colour control RGBW, setup scenarios, 2D Room plan, measured value display & history
Display	TFT 4,8", 1120x480 px, capacitive touch technology
Enclosure	PC V0 and glass, Surface glass, white or black design variant glas + aluminium
Protection	IP30 according to DIN EN 60529
Cable entry	rear entry, breaking points bottom, drill mark top
Connection electrical	tool-free mountable spring terminal, max. 1,5 mm ²
Ambient condition	0+50 °C, max. 85% non-condensing
Mounting	surface mounted on flush-mounting box (\emptyset =60 mm) or to be mounted flat onto the surface using screws, base part can be mounted and wired separately
2 type inrush current: 24 (< 5 ms)	

 $^{^{2}}$ type inrush current: 2A (< 5 ms)

» Humidity (optional)


Measuring range humidity (relative)	0100% rH
Accuracy humidity	±2% between 1090% rH (typ. at 21 °C)

» CO2 (optional)

. 50 mm - 12 0/ of modeling thin at 04 00 500/ HT 4045 hDa	asuring range CO2
Accuracy CO2 ±50 ppm +3 % of reading, typ. at 21 °C, 50% rH, 1015 hPa	curacy CO2
Calibration self-calibration dual channel	libration
Sensor NDIR (non-dispersive, infrared)	nsor

» CONNECTION PLAN

Room operating unit - Casambi

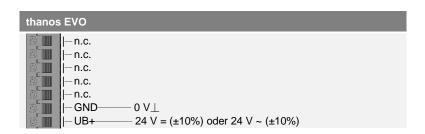


page 4 / 7 Issue date: 05.04.2023

» MOUNTING ADVICES

Cable entry

There are predetermined breaking points for 2 optional cable entries on the underside of the base plate.

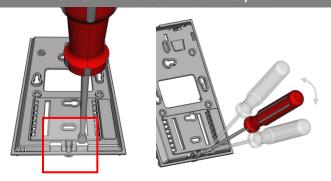

Please make sure that the device is de-energized if you want to install it!


The installation can be performed on the flat wall surface or on a flush-mounted box. A representative place should be selected. Sunshine and draft, e.g. in the installation tube should be avoided, so that the measurement result is not falsified. Seal the end of the installation tube.


- For wiring, the upper part of the device must be removed from the base plate. Base plate and upper part are detachably connected to each other by means of locking lugs.
- The mounting of the base plate on the flat wall surface is done with rawplugs and screws.
- Finally, the device is attached to the base plate and fixed with the screw.

Housing open / close

Snap the upper part of the housing into the locking lug on the upper side

Fix the upper part of the housing on the underside with the screw

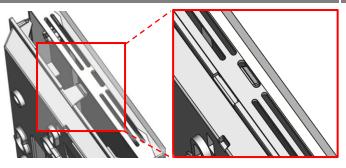

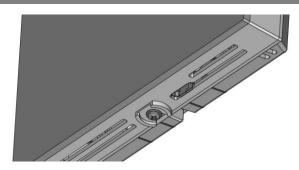

» CONFIGURATION

The configuration is performed in powered state. The following options are available for configuring the device:

Device connection	Casambi Communication	Micro-USB
Configuration- adapter	internal	Thermokon USB-Interface
	O9 38 O9 38 For Ent ON Google Play Download on the App Store	For the 2D Room-plan transfer
Configurations-	Smartphone/Tablet with CASAMBI App	PC/Notebook with uConfig Software
software	Parameterization with mobile device via bluetooth and CASAMBI App.	Partly parameterization with Thermokon software uConfig, via Micro RS-232/USB Converter* (ArtNo.: 597838)


*Commercially available Bluetooth dongles or USB to Micro-USB adapter cables are not compatible.



Position of the micro USB port, see bottom of the device, for configuration with Bluetooth dongle or Micro-USB programming interface

Issue date: 05.04.2023 page 5 / 7

» FUNCTION DESCRIPTION - HOMESCREEN THANOS EVO

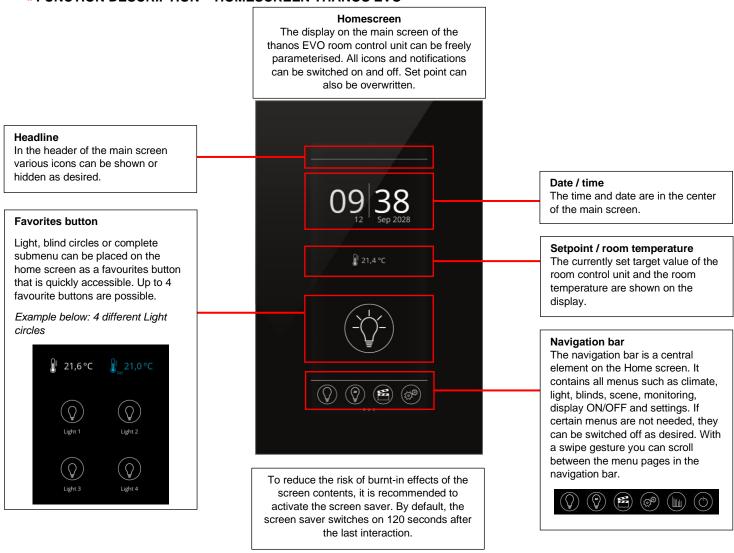

» CASAMBI COMISSIONING


- 1. Connect the device to the power supply. Observe the connection diagram!
- 2. Open Casambi App (iOS App Store / Android Play Store)

If an unpaired device is found, it is suggested to add the device to a network.

Add thanos EVO to an existing Casambi network, is required switch to other Casambi network first.


After pressing the "back" button the network can be changed ("my networks").

- 4. The device appears in the gateway section.
- 5. Configure the thanos Evo Casambi parameters.

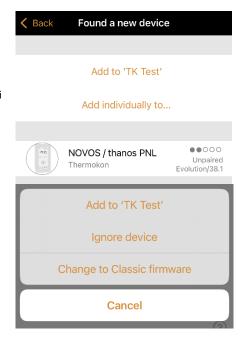

page 6 / 7 Issue date: 05.04.2023

» CASAMBI PARAMETER

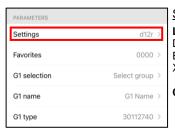

Settings (parameter LTBC)

L = language D - german T = Time synch 0 - no time synch

E – english X – no change time synch from Casambi
 to device

B = Behavior
1 – external control

(configurable via BUS)
- standalone/panel

(configurable only via CASAMBI)

C = display color scheme

x background color / text color0 no change

B black / white W white / black

G green / whiteL blue / white

 ${f R} \ \ {
m red} \ / \ {
m white}$

Example settings: d12l = german | time synch | standalone/panel | background color blue / text color white



Favorites* (ABCDE)
A favorite button 1

B favorite button 2 C favorite button 3 D favorite button 4

E favorite button 5
Default value: 0 - none

i.E.: 0b300

- none / scene 2 / group 3



Gx selection / name (Selection / Input field)


Selection - Casambi group

Name - group name

Favorites

1	Group 1
2	Group 2
3	Group 3
4	Group 4
5	Group 5
6	Group 6
7	Group 7
8	Group 8

а	Scene 1
b	Scene 2
С	Scene 3
d	Scene 4
е	Scene 5
f	Scene 6
g	Scene 7
h	Scene 8

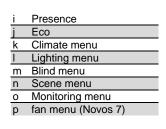

q	shading 1
r	shading 2
S	shading 3
t	shading 4
u	shading 5
٧	shading 6
W	shading 7
Х	shading 8



Gx type

(Light group configuration)

ITDSMnMx I – Icon

T – Type D – Dim function

S – Step size Mn / Mx – minimum / maximum Color temperature



<u>Scene symbol</u> (Scene symbol configuration)*

1. digit = scene symbol 1

2. digit = scene symbol 2...

Sx selection / name (Selection / Input field)

Selection - scene

Name - scene name

Gx Type parameter listing

0 - universal, 1 - spot, 2 - cassette, 3 - floor lamp (default)

T 0 – slider (default), 1 – RGBW colourpicker, 2 – colour temperature picker

D 0 – not dimmable, 1 – dimmable (default)

S 0-1, 1-1 (default), 2-2, 3-3, 4-4, 5-5, 6-10, 7-15, 8-20 (in %)

Mn Input value (2 digits) multiplied with 100 = minimum kelvin (Color Temperature) (i.E.: Mn = 27 -> CTmin = 27 * 100 = 2700K (default))

Input value (2 digits) multiplied with 100 = maximum kelvin (Color Temperature) (i.E.: Mx = 40 -> CTmax = 40 * 100 = 4000K (default))

Example Gx Type: 30112740 = floor lamp | slider | dimmable | 1 | min kelvin color temp 2700k | max kelvin color temp 4000k


Scenen symbol parameter listing

- work (briefcase)
- presentation (canvas)cinema (screen)
- 3 party (cocktail glass)
- 4 bedroom (bed)
- food (serving bell)do not disturbe (lock)
- 7 cleaning (vaccum cleaner)
- 8 scene (clapperboard)

Example scene symbol: 02437000 = scene 1: work | scene 2: cinema | scene 3: bedroom | scene 4: party | scene 5: cleaning

Issue date: 05.04.2023 page 7/7

» DIMENSIONS (MM)

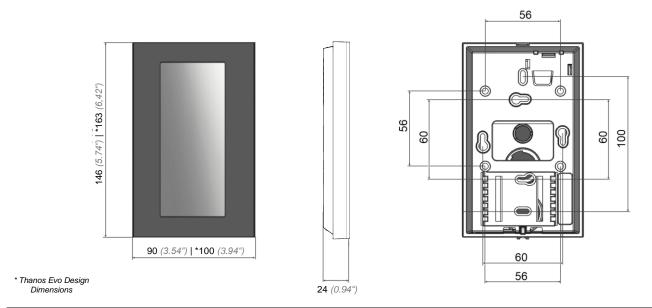

» ACCESSORIES (OPTIONAL)

Rawlplugs and screws (2 pcs. each) PSU-UP24 – flush mount power supply 24 V (AC Input: 100..240 V \sim | DC Output 24 V = 0,5 A) Thermokon USB-Interface

Item No. 102209 Item No. 645737 Item No. 597838